




mockingbird

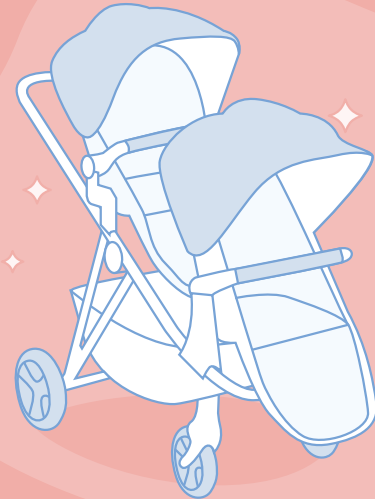

2nd Seat Kit

Expand your Stroller in a few easy steps!

Scan the QR code for a step-by-step video tutorial on setting up and using your Mockingbird 2nd Seat Kit.



Warning


Please follow all of these instructions to ensure the safety of your children. Keep these instructions for future reference. Failure to follow these instructions could result in serious injury or death.

Unstable conditions can occur during loading and unloading. To avoid tipping:

Loading: Always load the upper seat first (before the lower seat).

Unloading: Unload child in the lower seat first. To prevent tipping, always engage the brake before loading and unloading.

Never allow a child to step on the seat footrest or front panel to get in or out of the stroller without an adult holding the handlebar and keeping the stroller steady.

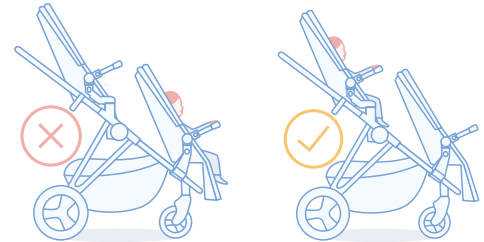


Choking Hazard

Adult assembly required because of small parts. Keep (assembly parts) out of reach of children under 3 years.

Caution

- Always ensure that the child is properly positioned by using the safety harness according to these instructions to avoid serious injury from falling or sliding out.
- Make sure the stroller is fully erect and latched in the open and locked position before allowing children near the stroller.
- Make sure all body parts are clear of the stroller when folding and unfolding.
- Never use the stroller on stairways or escalators.
- Never use the stroller with roller skates or in-line skates.
- Do not jog or run with your stroller.
- Maximum user weight in single stroller seat 50lbs. Maximum user weight per seat when using stroller with a 2nd Seat Kit 45lbs. Maximum user height in the stroller seat 42 inches (107 cm).
- Placing excessive weight in the unit and storage compartments may change the balance of the stroller and cause hazardous conditions.
- Never leave children unattended
- Never allow the stroller to be used as a toy
- Hold the handlebar when strolling at all times if children are on board.


First, unpack the box and make sure you've got everything

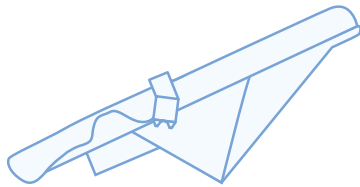


Stroller Seat




Child Bar

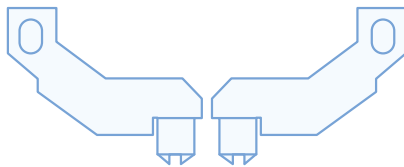

Upper Adapters

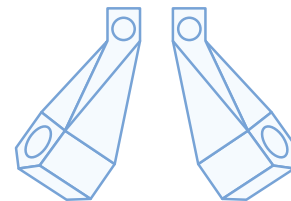

Lower Adapters

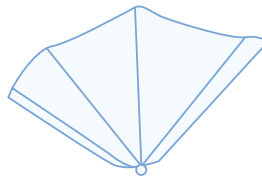


Extendable Canopy

1

Attach the Child Bar


Attaching the Child Bar

Insert the pins located on the ends of the child bar into the housing located on the left / right side of the seat frame. The child bar “CLICKS” on both sides once it is in a fully locked position.

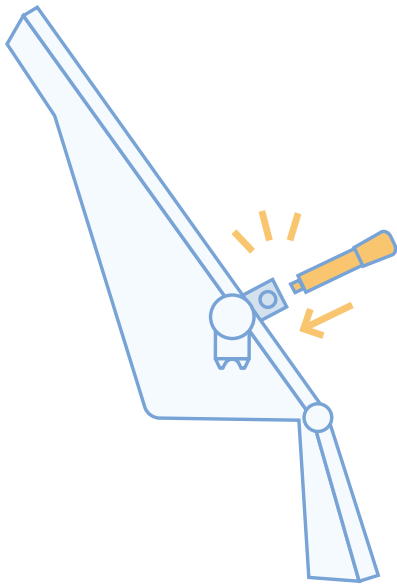

Removing the Child Bar

To remove, press the white buttons located just below either side of the child bar.

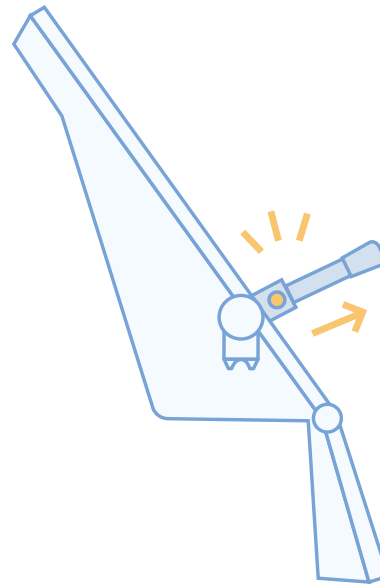


2

Attach the Canopy


Attaching the Canopy

Place the back of the canopy onto the top of the stroller seat over the recline latch. Slide both sides of the canopy locks into both canopy housings located on the seat frame until they “CLICK” into a fully locked position.

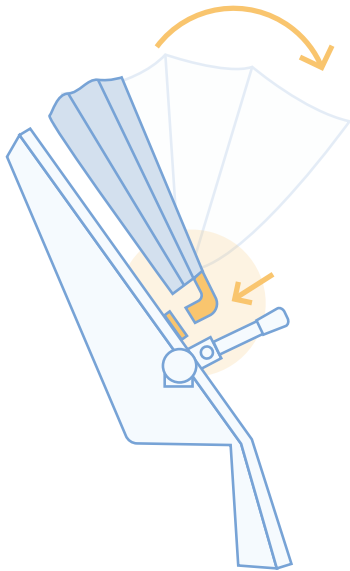

Securing the Canopy

Secure the elastic loops on the left and right sides of the canopy onto the hooks located on the seat frame.

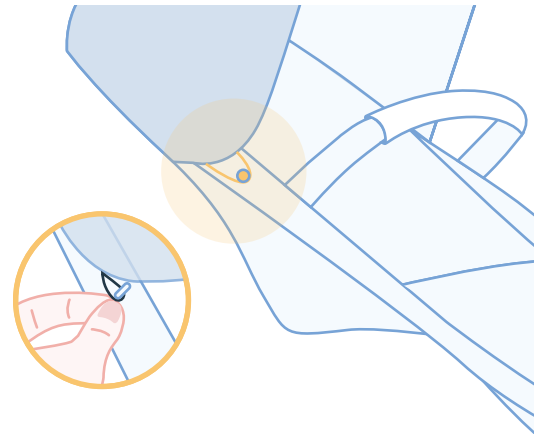

3

Attach the Upper Adapters

Place the the upper adapters into the right and left joints. The white button on the upper adapter should be facing outward. The upper adapters “CLICK” on both sides once they are in a fully locked position. Pull upward on the upper adapters to ensure they are securely locked onto the stroller frame. Press the buttons located on the adapters to remove.





4

Attach the Lower Adapters

Press the black release button on the inside of the lower adapter to release the latch, opening the hinged door. With the white button facing outward, place the open hinged door so that it can clasp around the bottom of the frame, just above the black plastic footwell.

Bring the hinged door around the frame and close it, when it's secured, it will 'CLICK' in place and you'll know it's fully locked. Repeat on the other side with the second lower adapter. Press the buttons located on the outside of the adapters to remove.

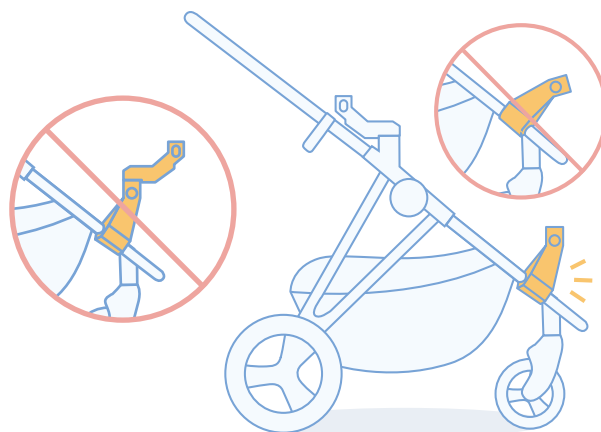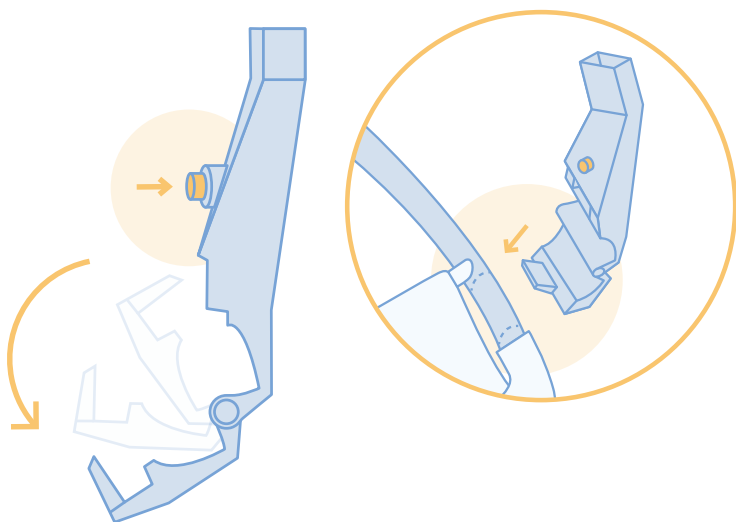

Important!

You should always attach both the Upper and Lower Adapters in their proper locations when using your 2nd Seat Kit. Upper Adapters should never be stacked on top of the Lower Adapters.

5


Attach the Seats

Place the one seat into the upper adapters until it “CLICKS” into a fully locked position. Place the second seat into the lower adapters until it “CLICKS” into a fully locked position. Lift up on the seat to confirm it’s fully locked. To remove the seats from the adapters, press the white buttons located on the adapters and lift the seats upward.

Important!

To avoid tipping or unstable conditions that can occur during loading and unloading: Engage the brake. When loading, load the upper seat first (before the lower seat). When unloading, unload child in lower seat first. If your toddler is getting in or out on their own, keep the stroller secure by holding the handlebar when the brake is engaged.

For best stroller maneuvering experience: Once your infant is old enough to sit in the toddler seat, we recommend placing your heavier child in the upper seat so the weight is balanced more towards the center of the Frame, providing the best strolling experience.

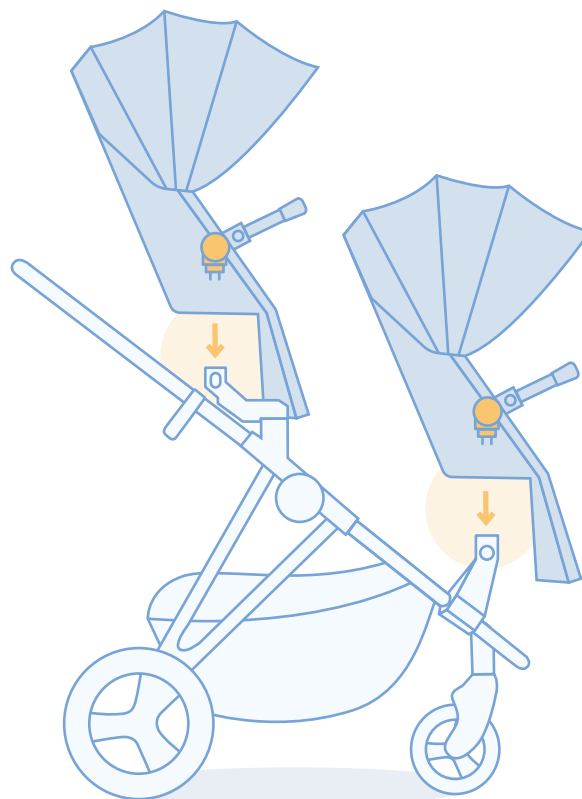

Pro Tip

To fold the stroller with two seats attached make sure that both seats are front facing and in the upright reclined positioned. In addition, make sure the brake pedal is pressed down completely before engaging the fold button on the handlebar.





6

Securing your little one

Adjust the shoulder straps

For easier access, open the shoulder pads and remove from the straps and re-attach after adjustment.

Slide the plastic stays up and down to adjust the height of the shoulder straps depending on your baby's size.

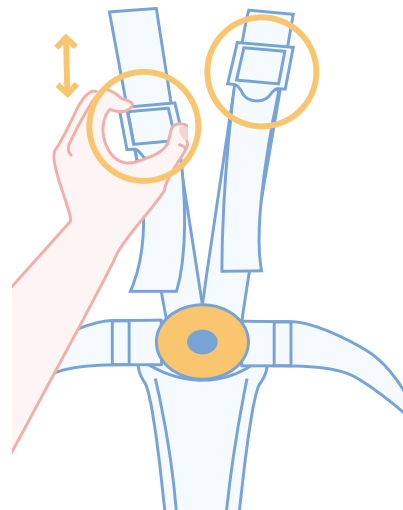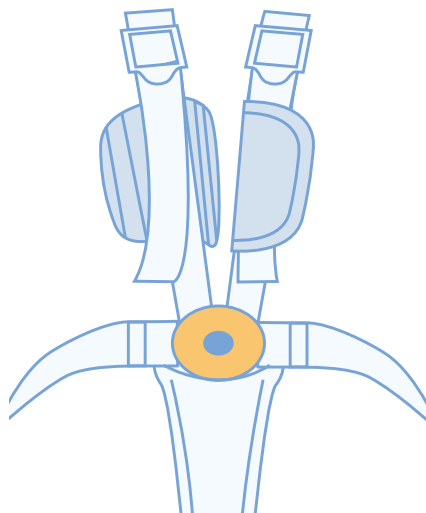


Pro Tip

Your stroller is preset with the shoulder straps in the lowest position. As your child grows, adjusting the straps upward will make it more comfortable for them.

If you are using an Infant Insert, Footmuff, or Seat Liner, you may need to adjust the straps to the loosest position to make room for them.

Place your child in the stroller

Position the crotch belt between their legs. Pull the shoulder straps over their arms and shoulders. Fasten both waist belts to the buckle on each side of the crotch belt, and make sure you hear a “CLICK” on both sides. Tighten each waist belt and shoulder strap so that the restraint system is snug.

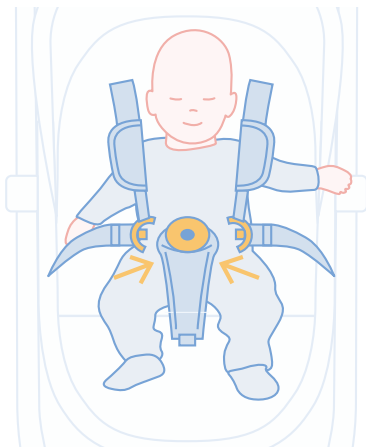


Important!

Before placing your child in the stroller, make sure the brake is engaged, press the pedal down until it ‘CLICKS’ into the locked position.

Tighten the straps

Feed the bottom end of the shoulder or waist strap through the plastic stay to form a loop and adjust the length. Once all straps are adjusted to the desired length, pull down on the ends of the shoulder straps to automatically adjust the shoulder strap height and ensure a snug fit for your little one.

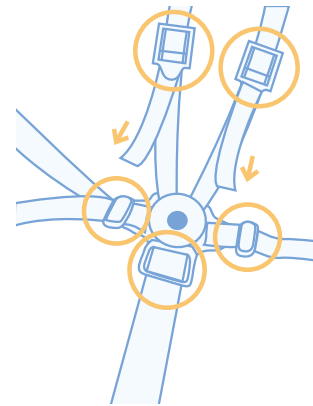

Pro Tip

Another way to adjust the harness is by adjusting the crotch belt. When using the seat liner or footmuff, it is always best to loosen the crotch belt to the maximum length, and remove the crotch pad if additional room is needed.

7


Arranging the Seats

To Recline the Stroller Seat

Lift the recline latch located on the top center of the stroller seat upward and rotate seat downward. To return to an upright position, lift the recline latch upward and rotate seat upward.



Additional arrangements are available with the use of the Car Seat Adapter, Infant Seat Insert, or Bassinet. **To view all 19+ stroller arrangements scan the QR Code or visit: hellomockingbird.com/arrangements**

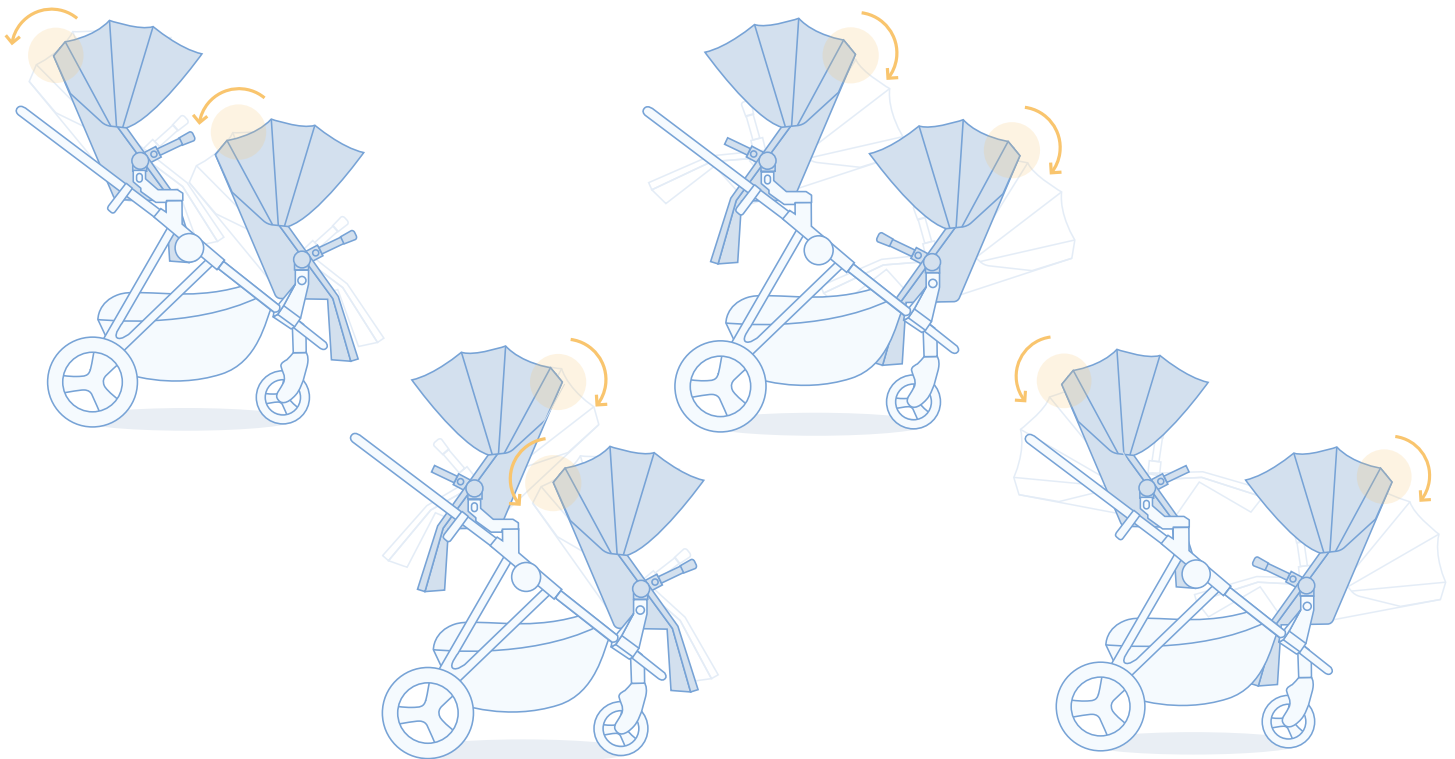


8

Washing the stroller seat


Remove the harness straps

Locate the plastic stays on the back and bottom of the stroller seat. Thread these through the stroller seat to remove the harness. The canopy and child bar should be removed as well.

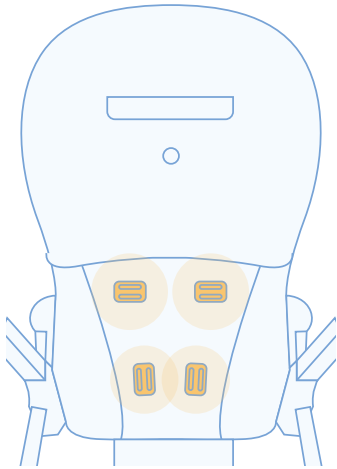


Remove the seat fabric

Unzip the footrest and undo the velcro attachments on the sides and bottom of the seat. Pull the seat fabric up and over the recline latch to fully remove the seat fabric from the seat frame.

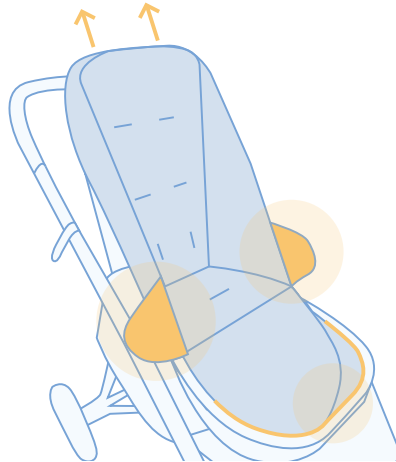


Remove the seat boards

Flip the fabric on the headrest over to expose the velcro opening. Undo the velcro and pull out the backrest board. Locate the velcro opening on the bottom of the seat, undo and pull out the seat board. You are now ready to machine wash your stroller seat. Wash in cold water and air dry only.

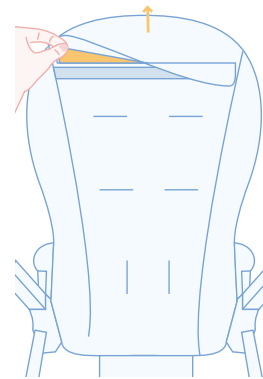

Back of the stroller seat

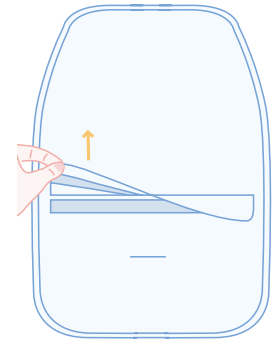

Bottom of the stroller seat



Pro Tip

For smaller messes, the stroller seat can be spot cleaned with a damp cloth.



When things get messy

Cleaning the fabric



Hand wash with a damp cloth



Air dry



Do not bleach

Cleaning the frame and plastic



Use mild cleaning solution



Use warm water on a sponge or cloth

Cleaning the Stroller Seat



Machine wash



Do not bleach



Air dry



Do not iron or dry clean

